






DANSANI
DANISH BATHROOM DESIGN




1








→ 2A

→ 2B


2A

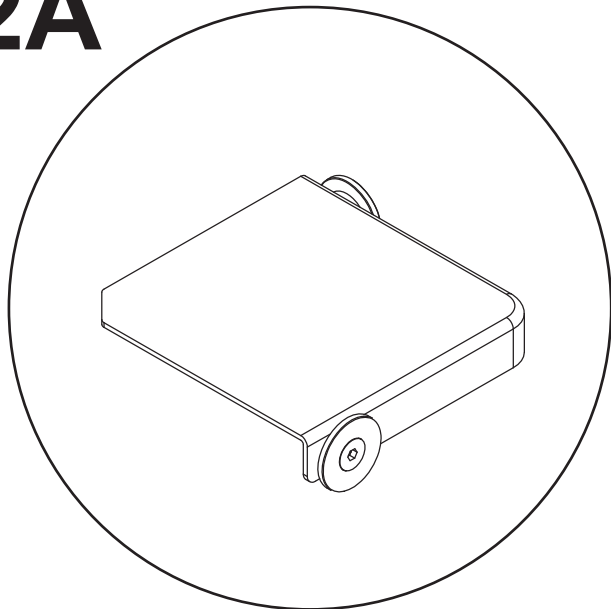



2B

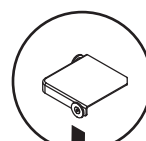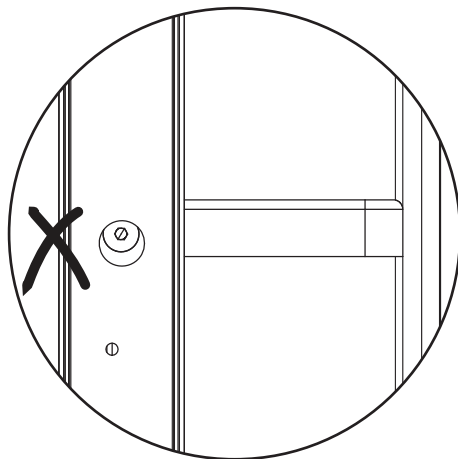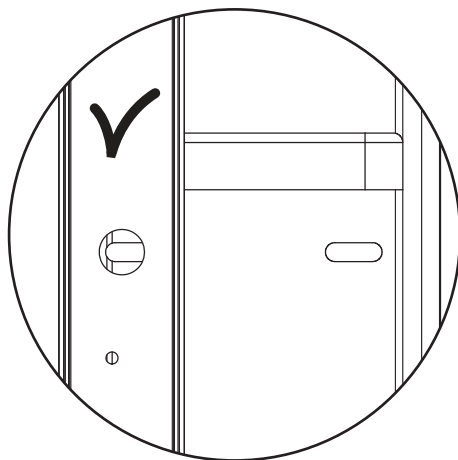
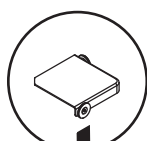
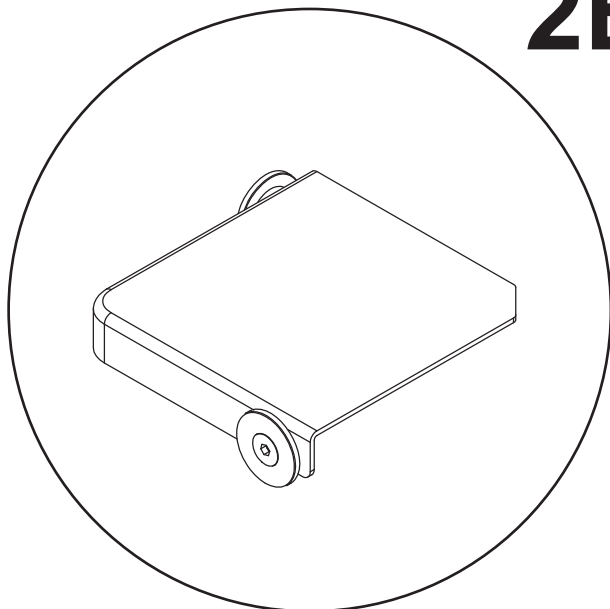


3



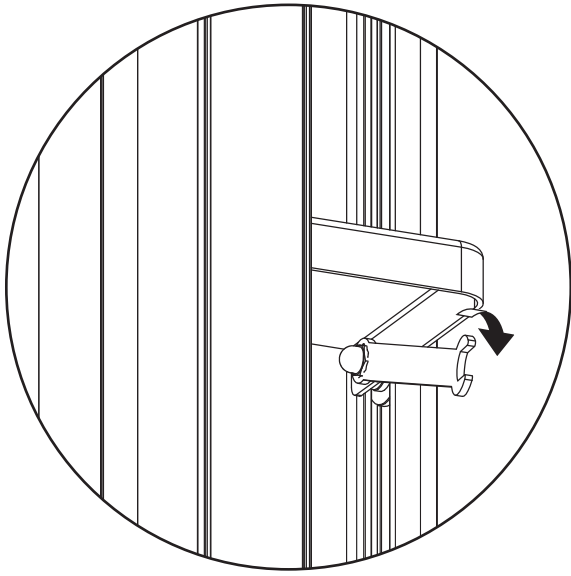


4


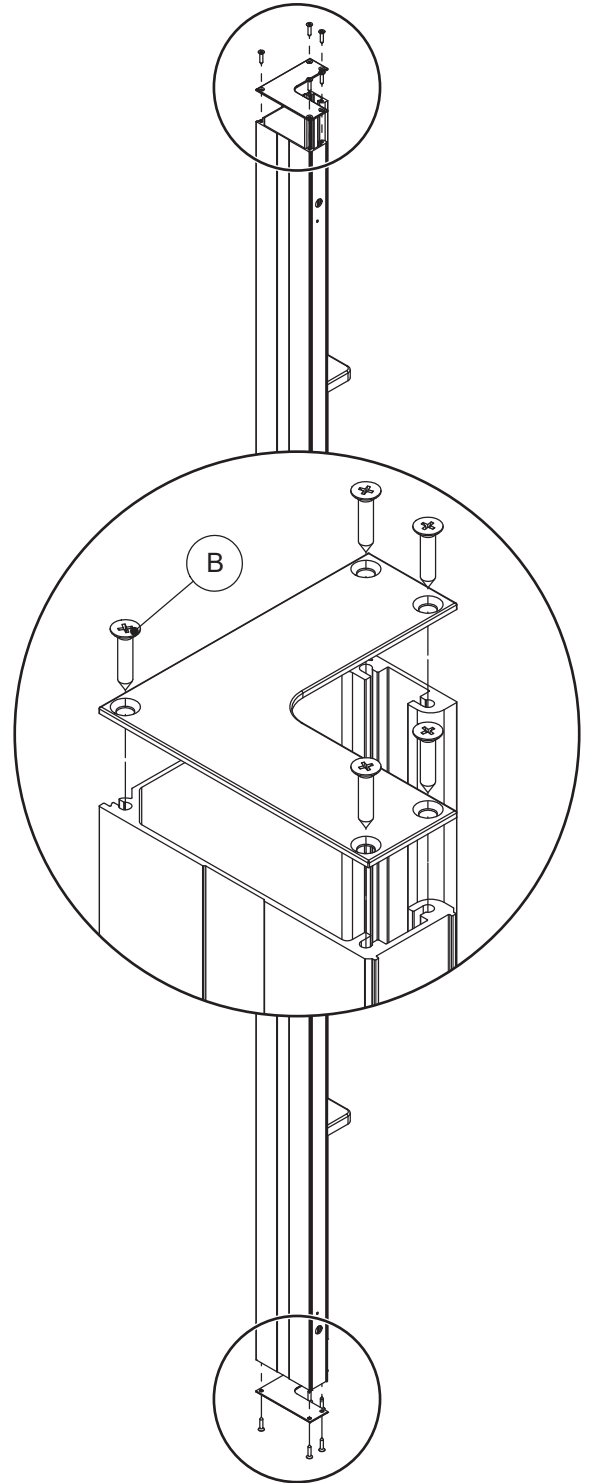
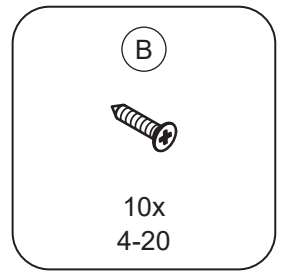


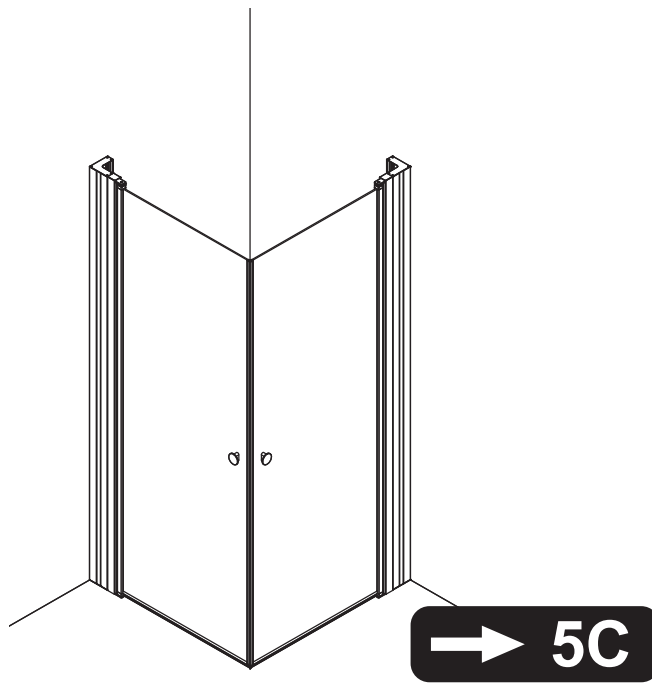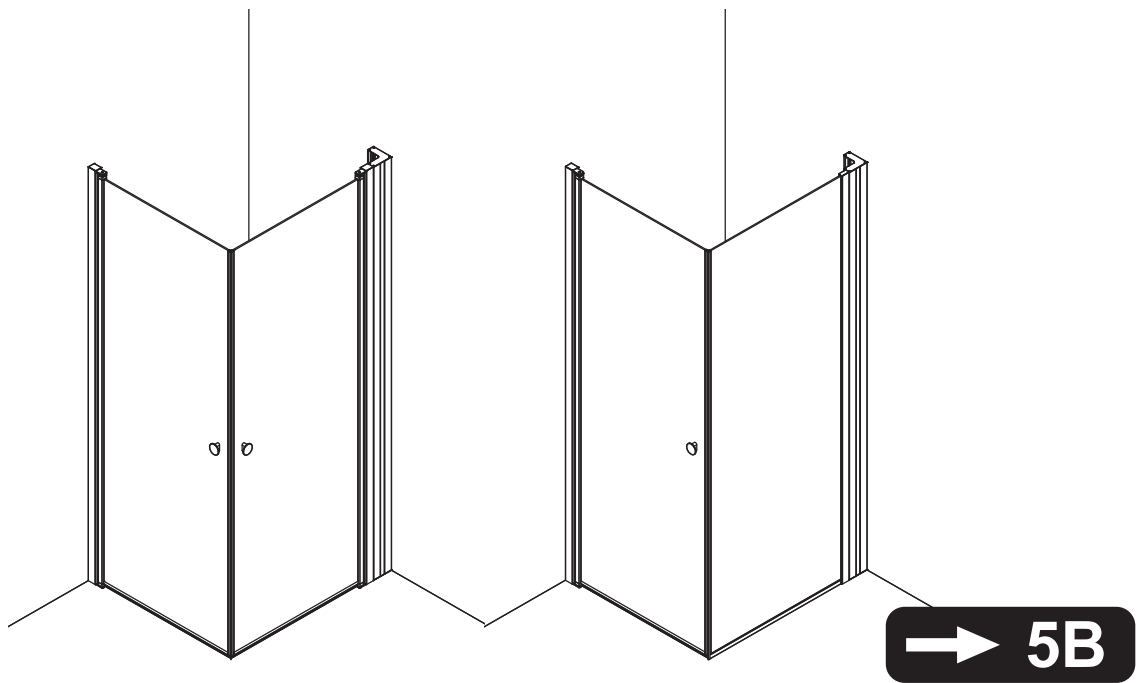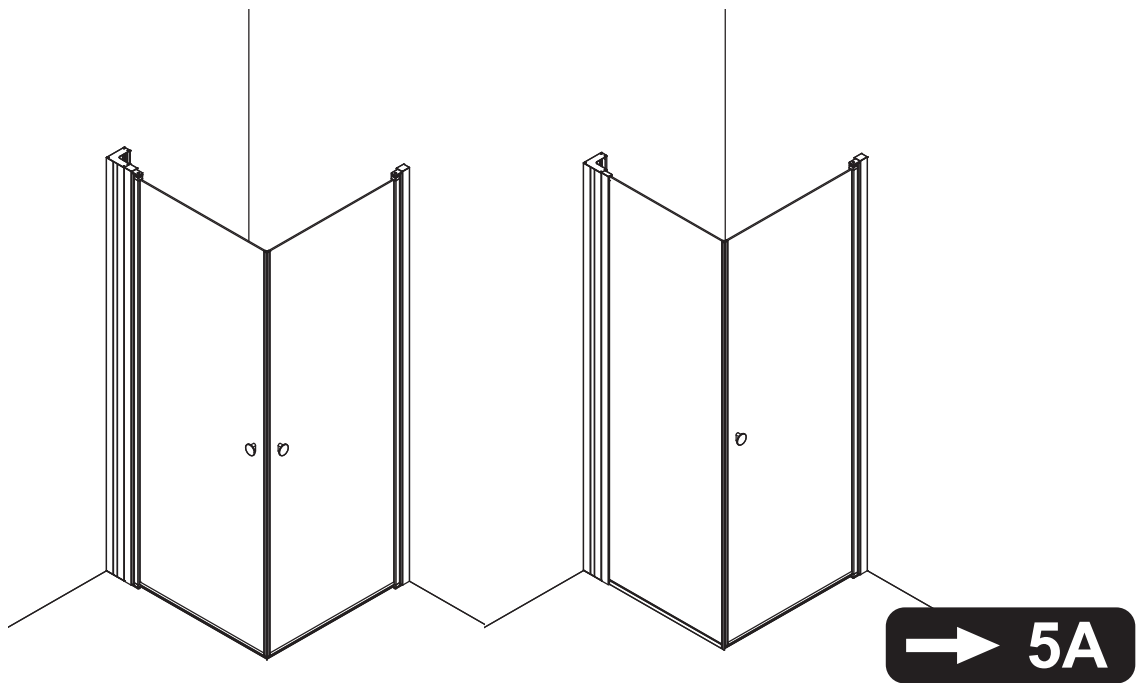



5A

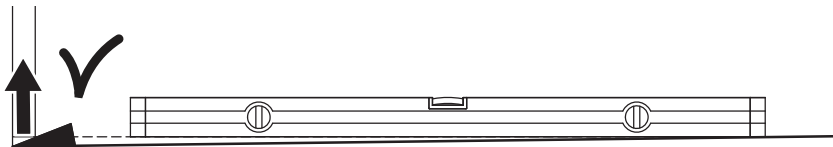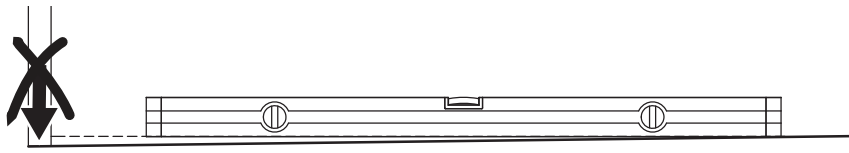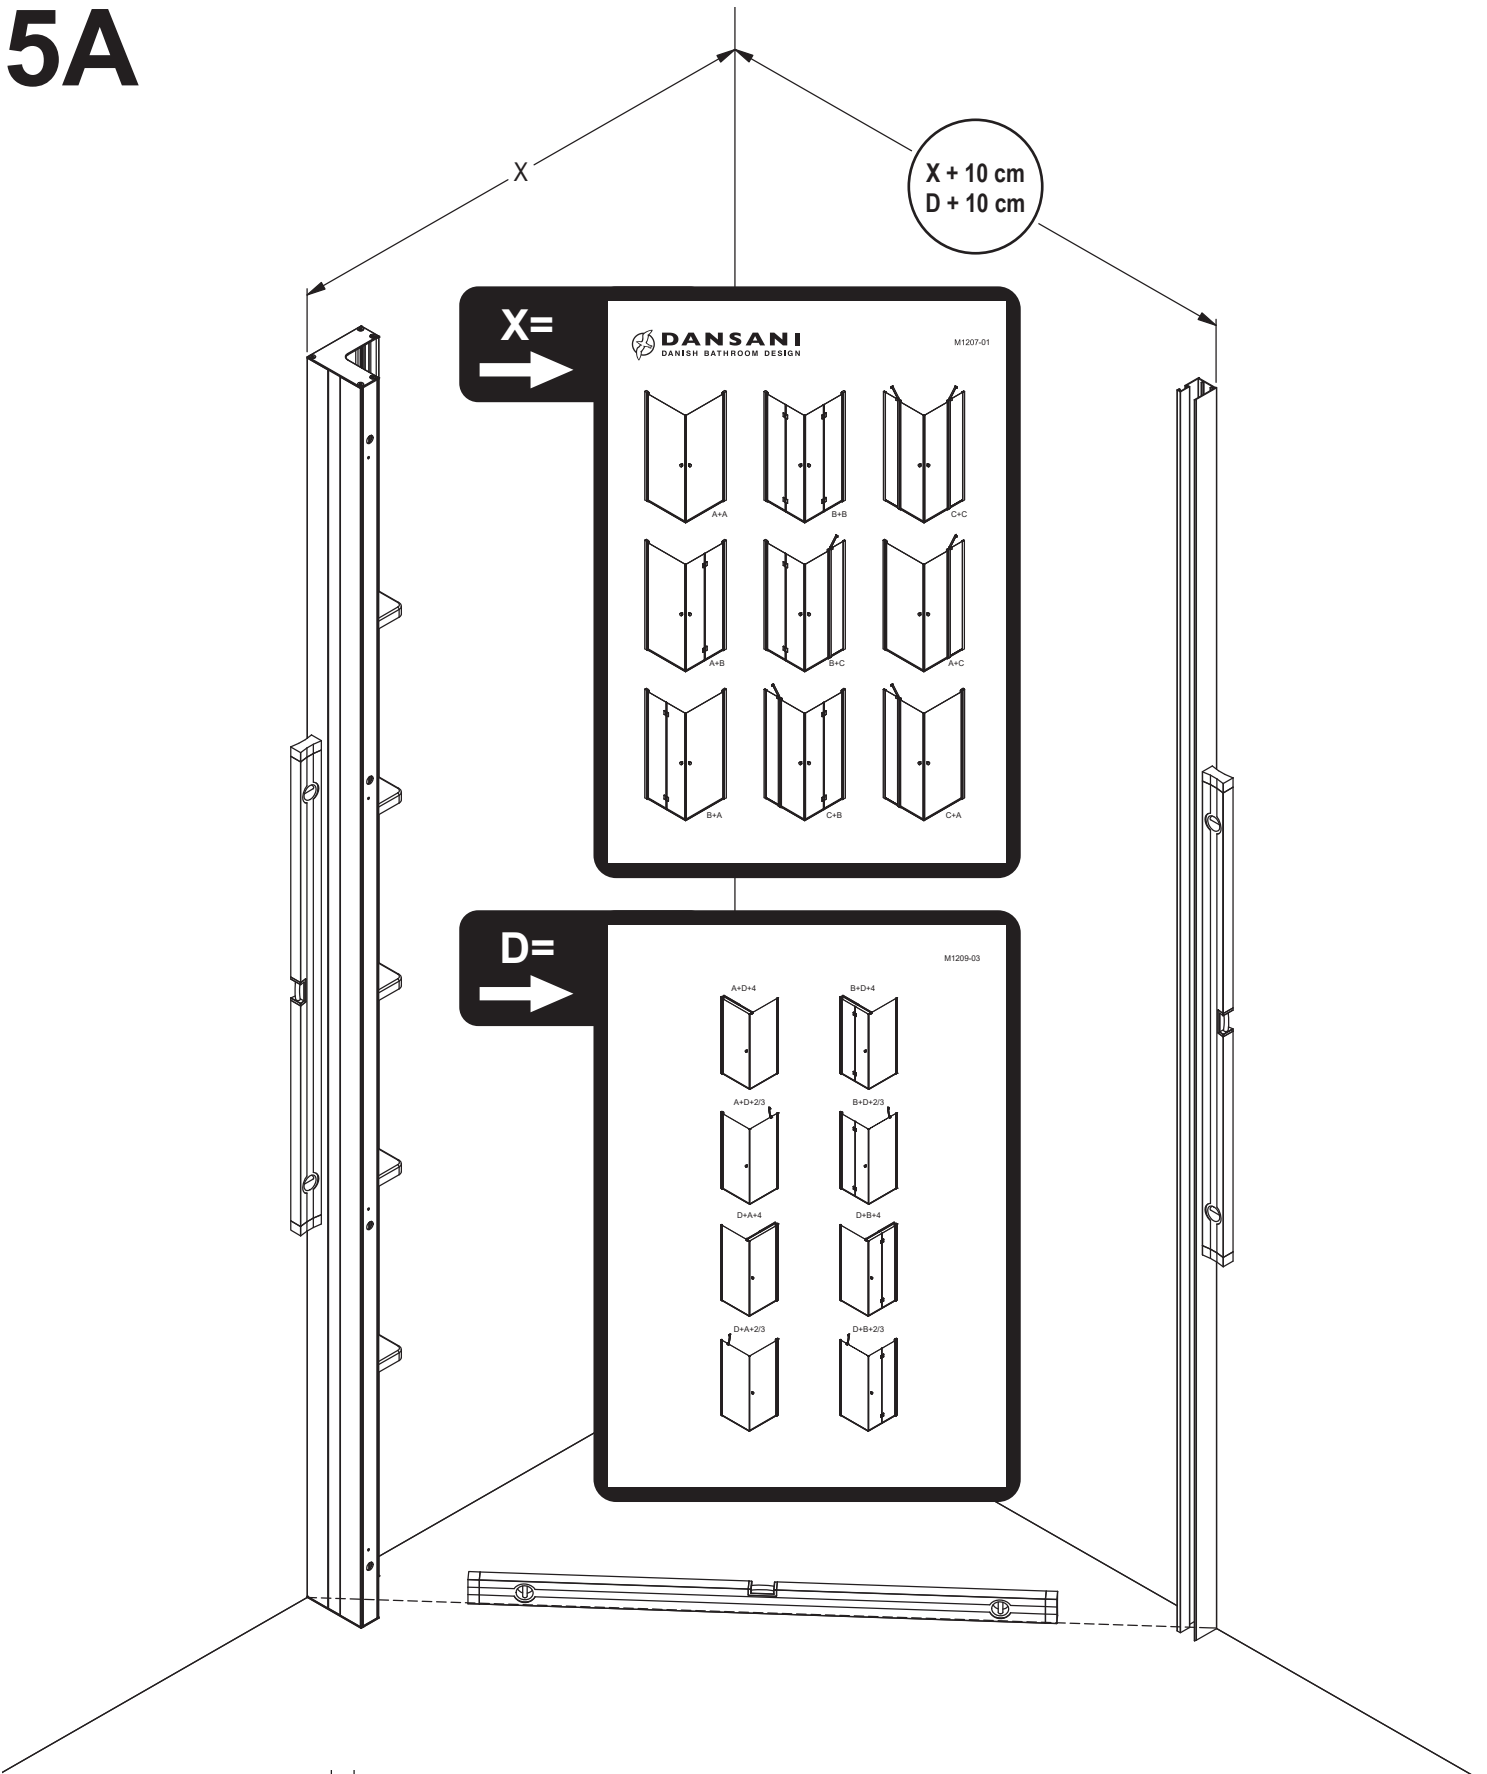


5B

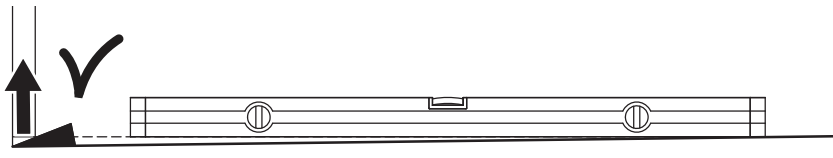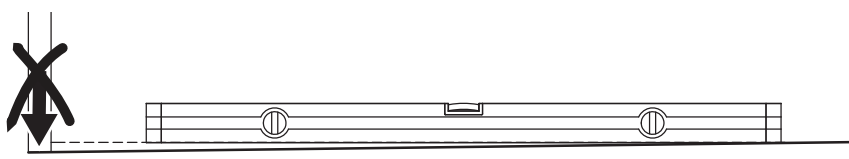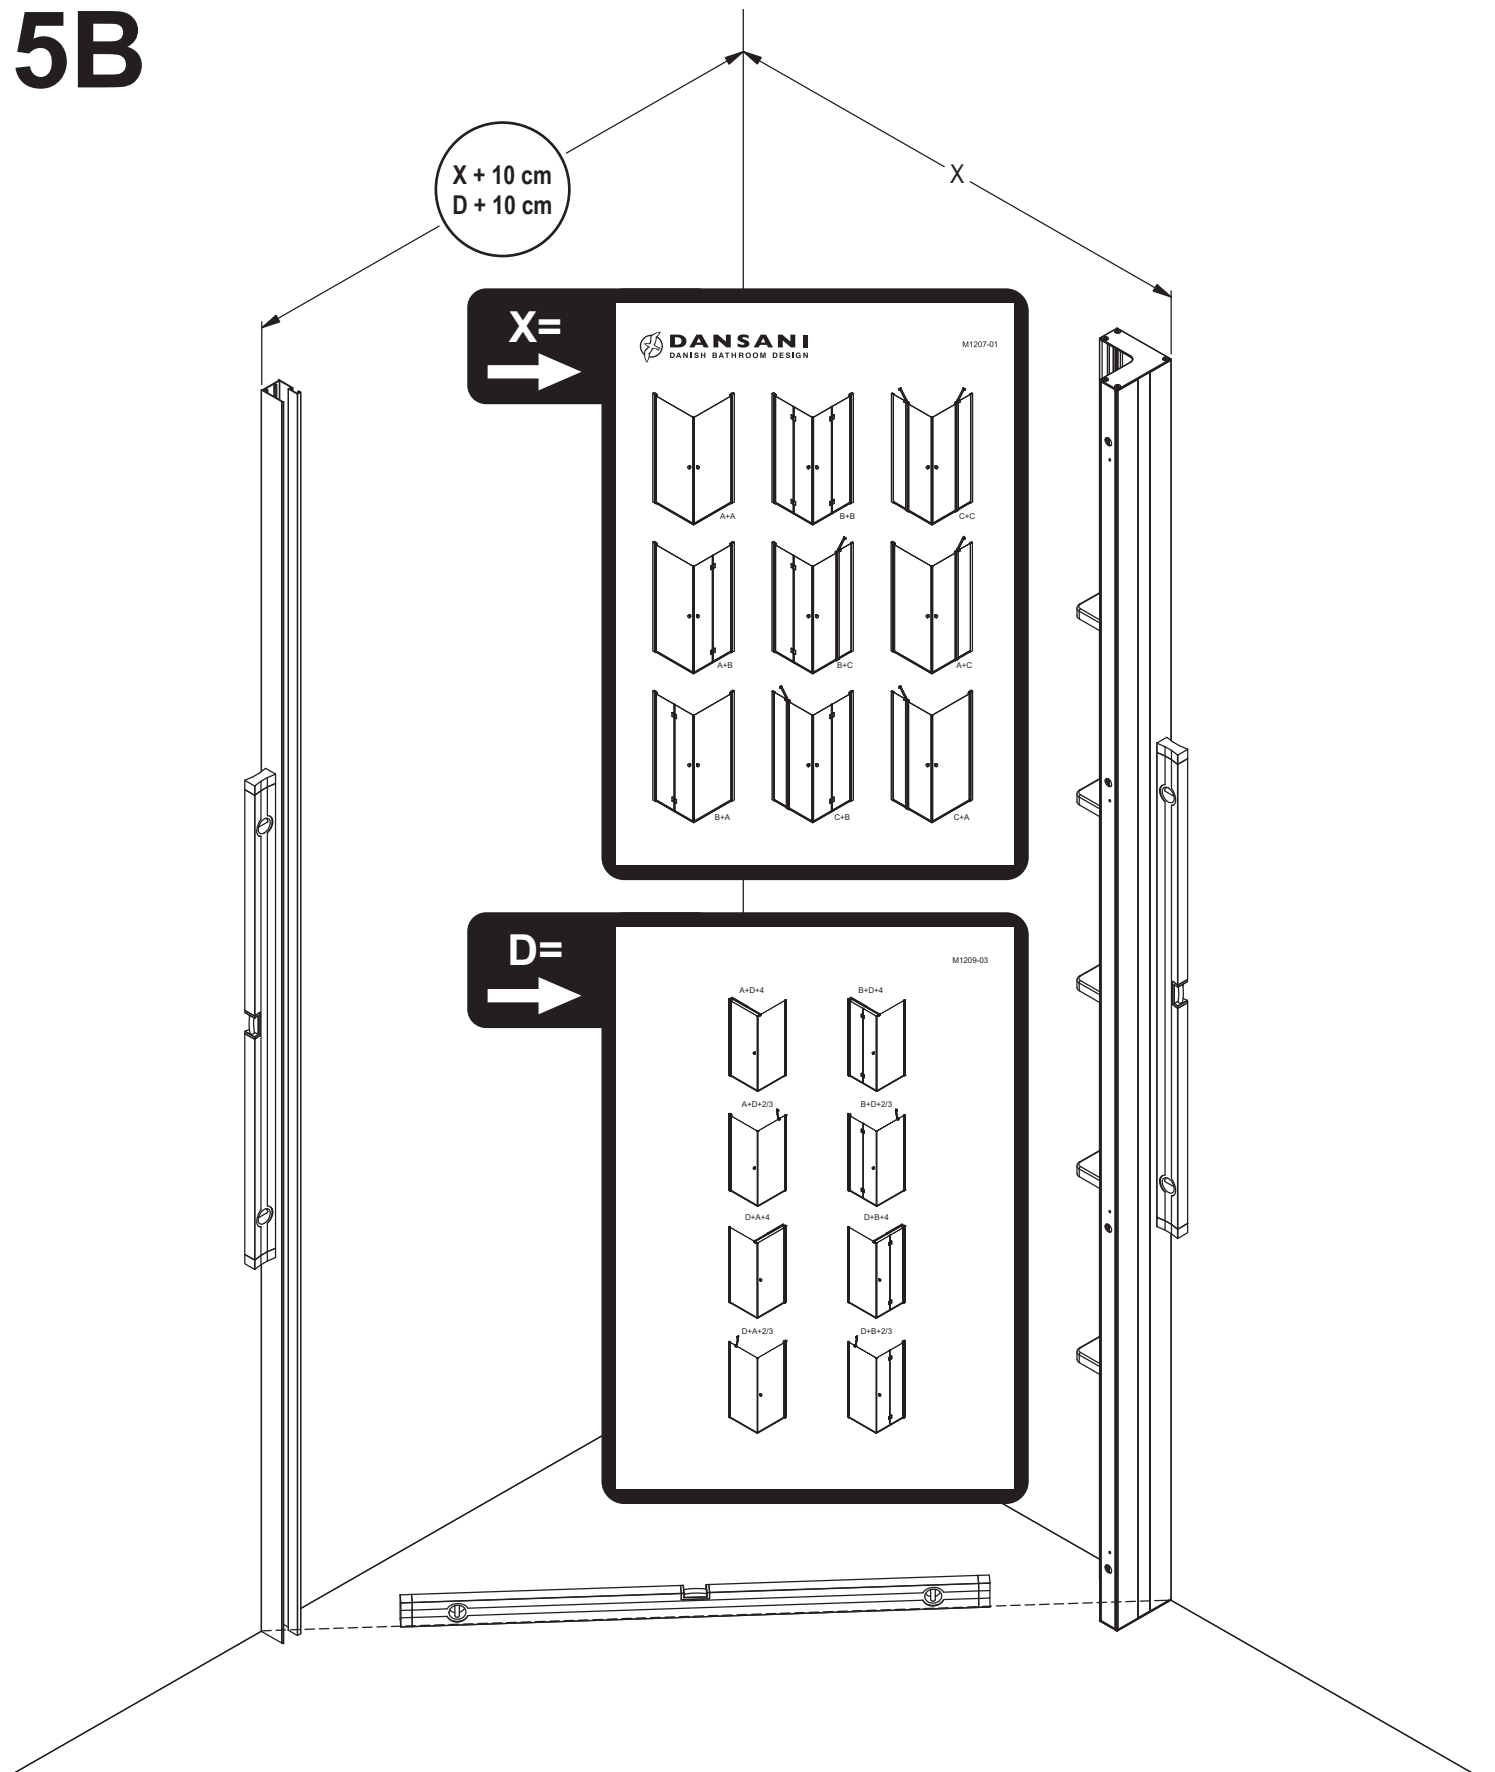




5C

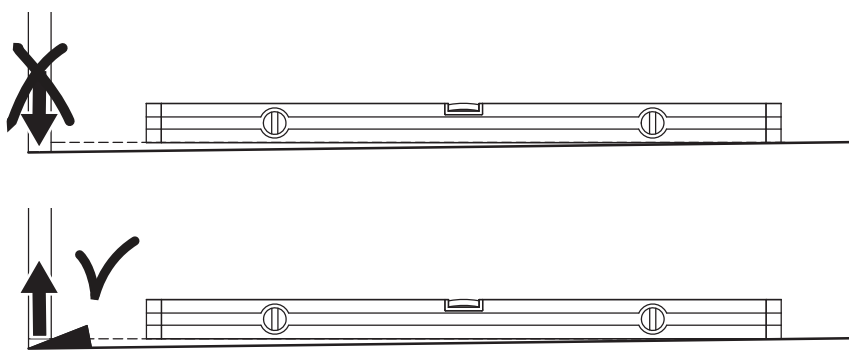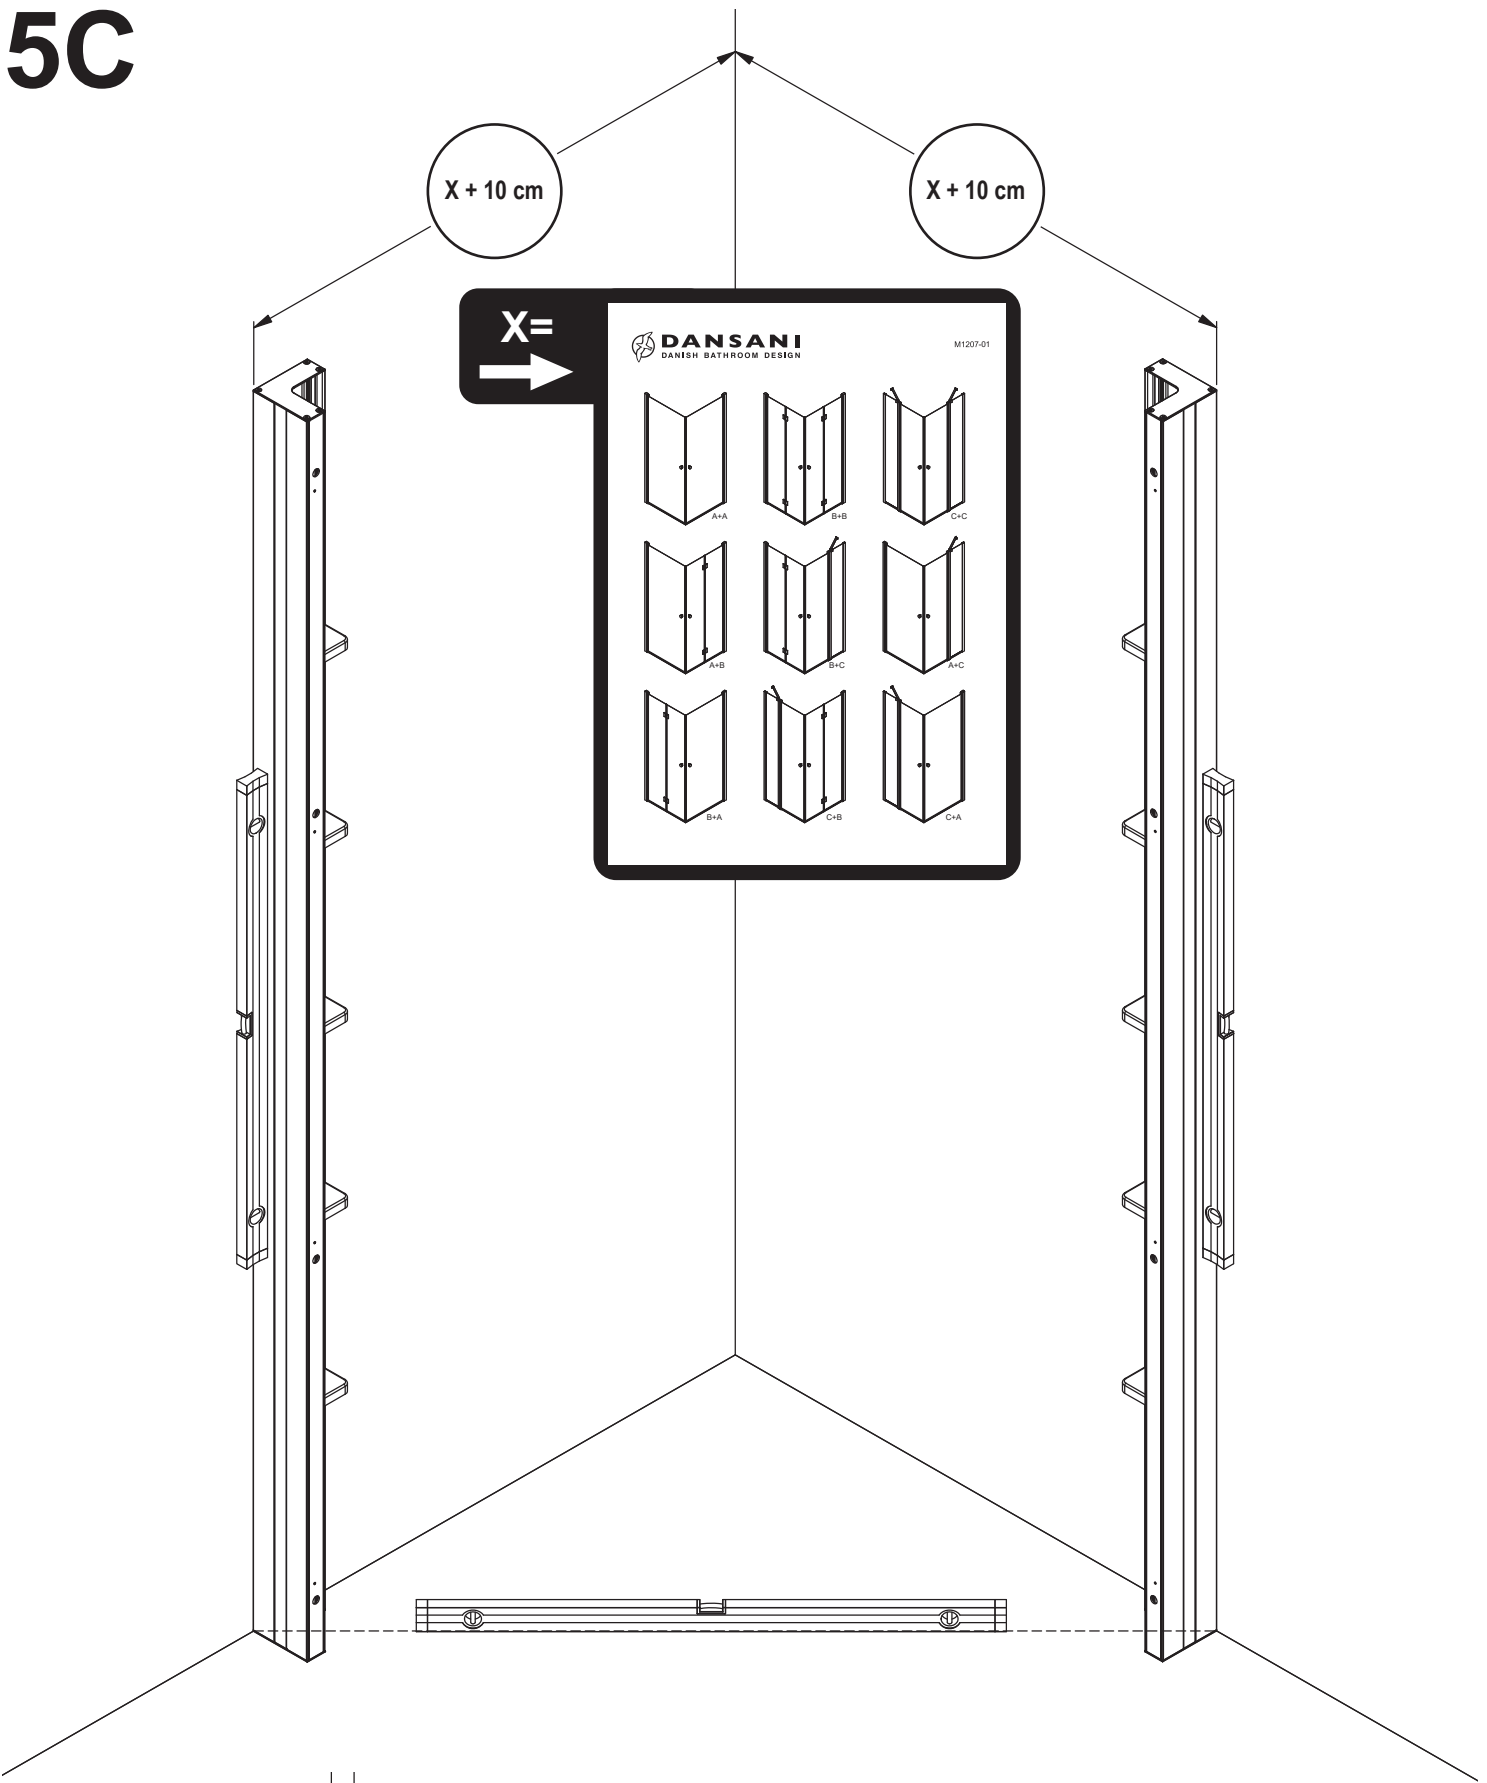



6

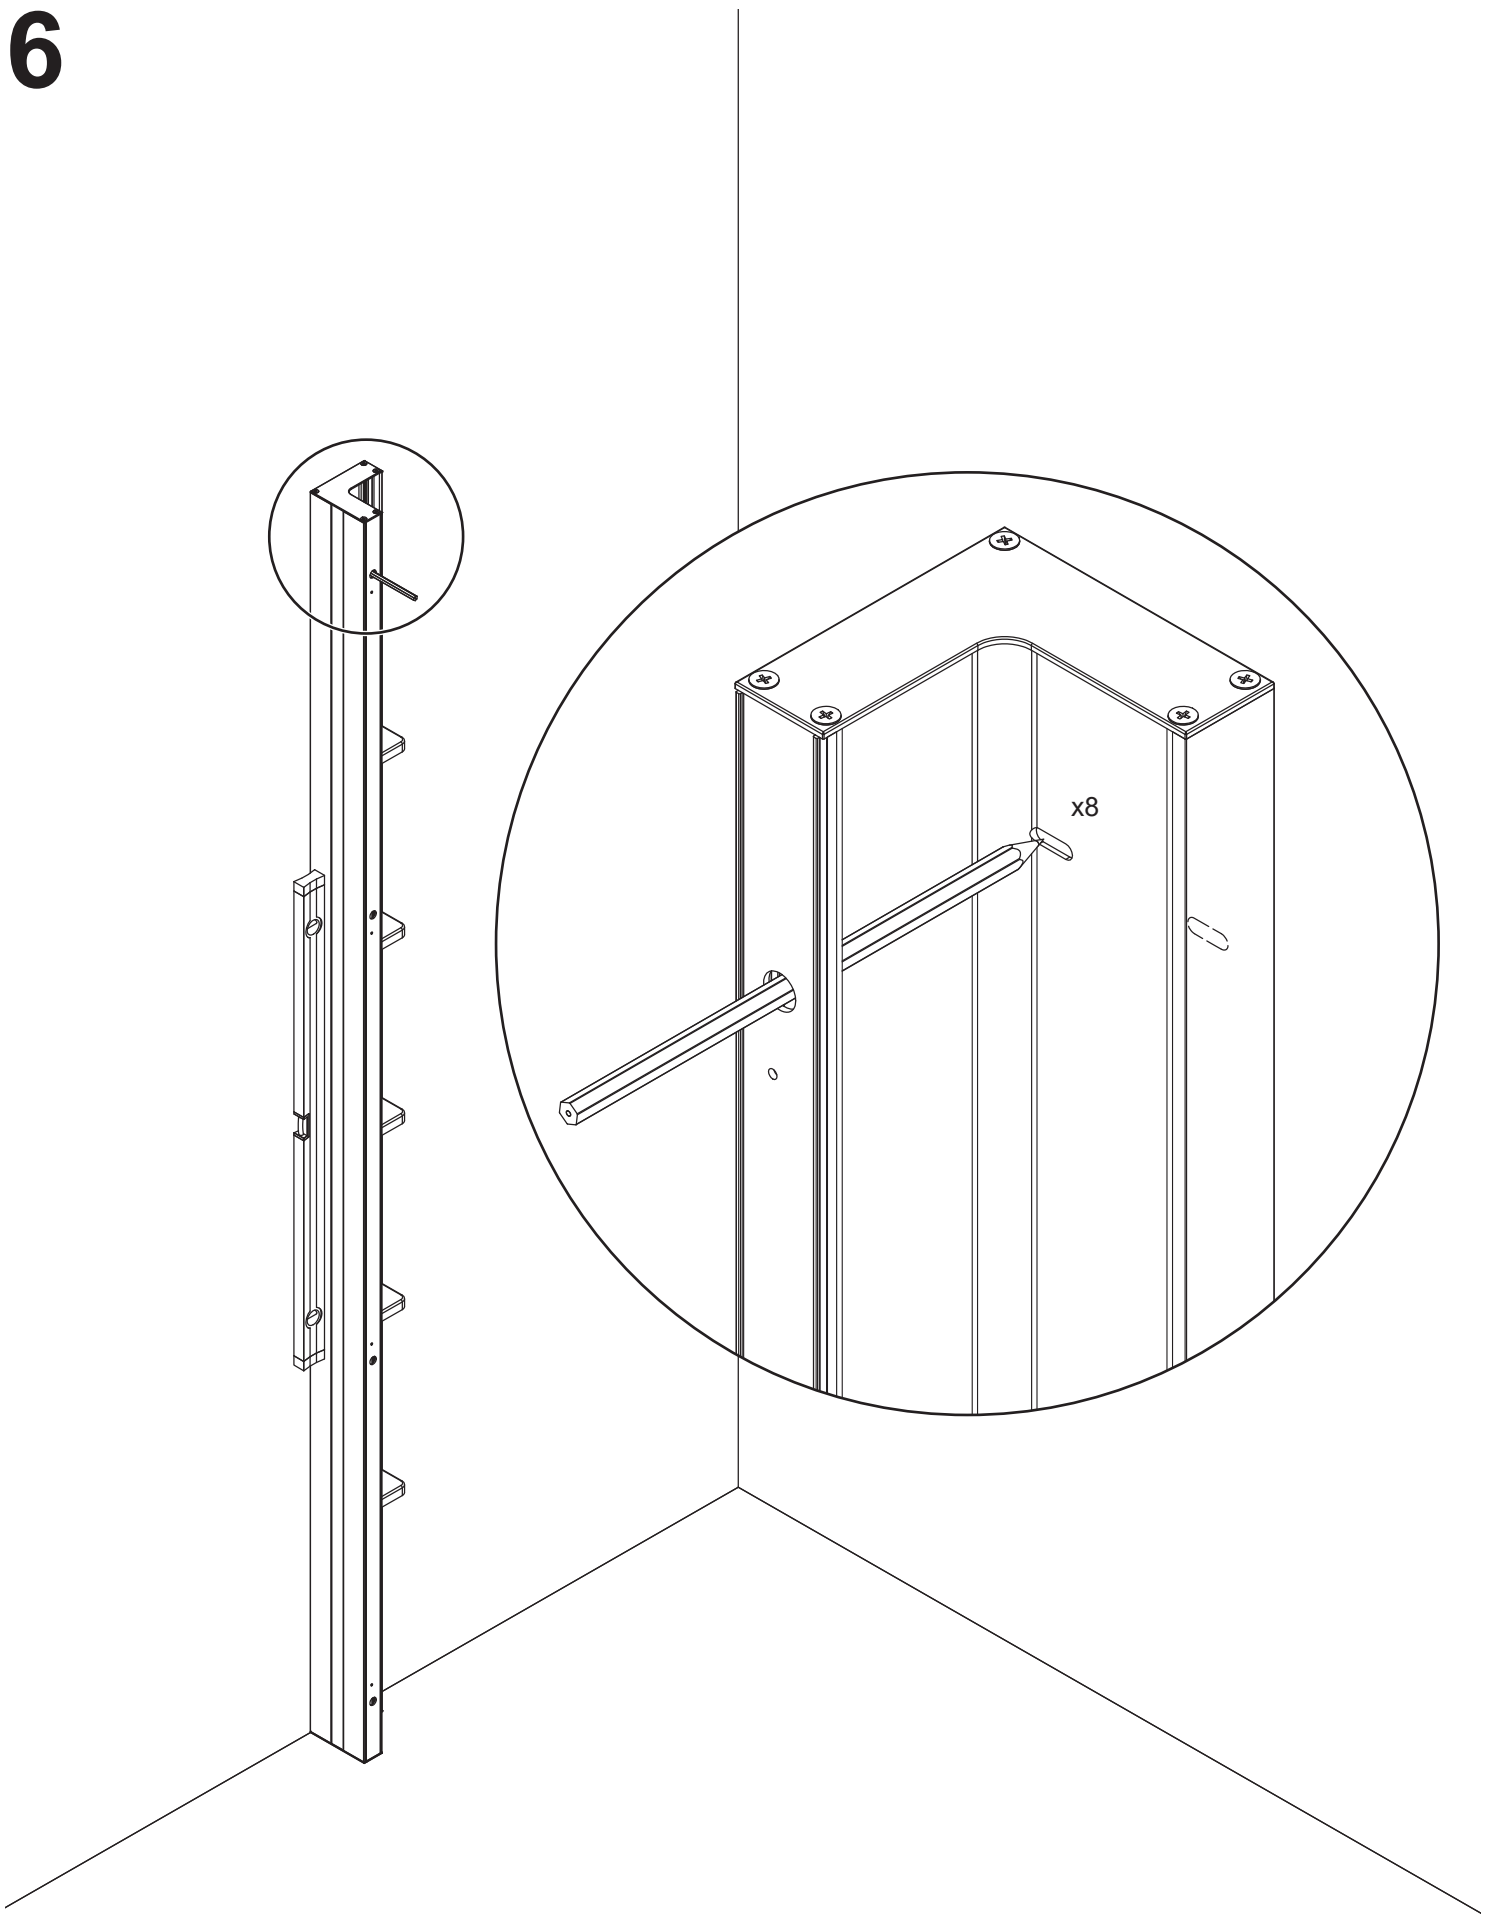



7

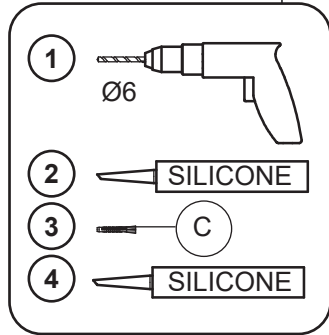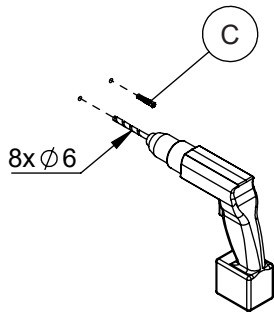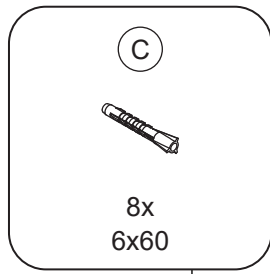



8

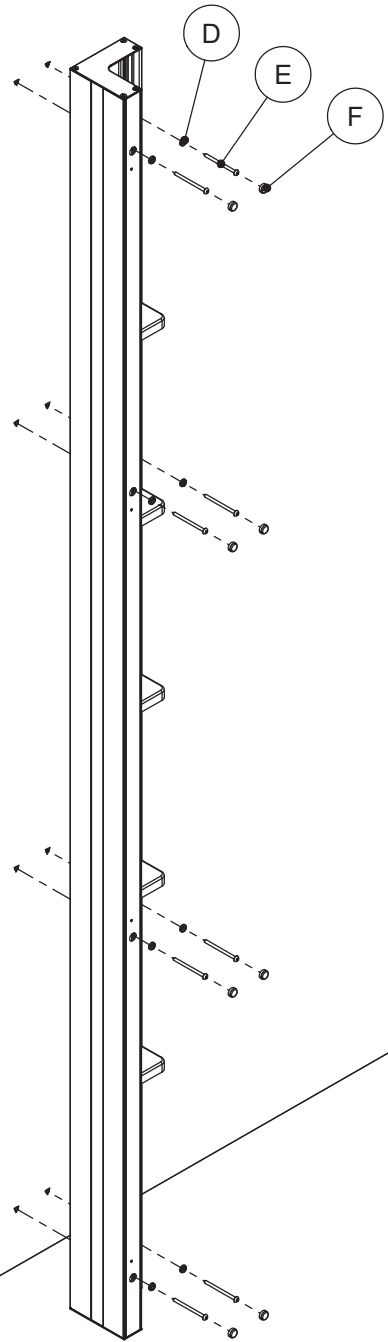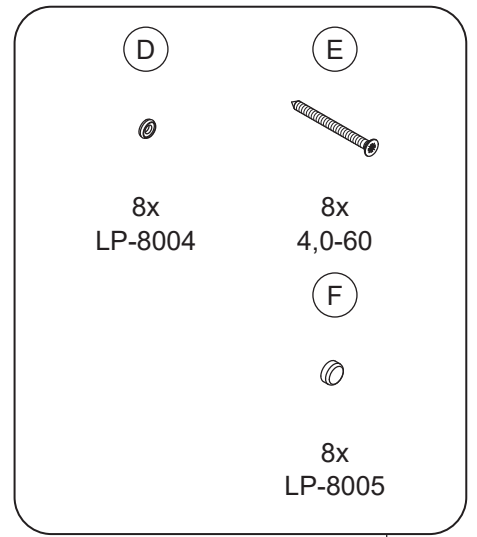

9A

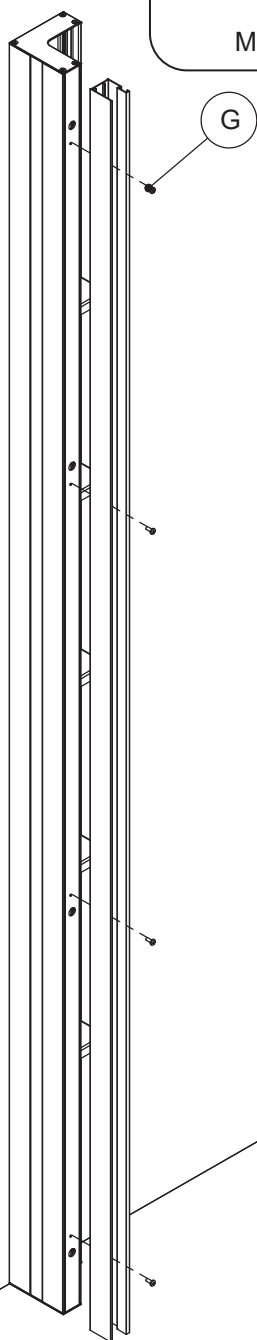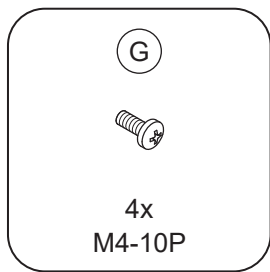

9B

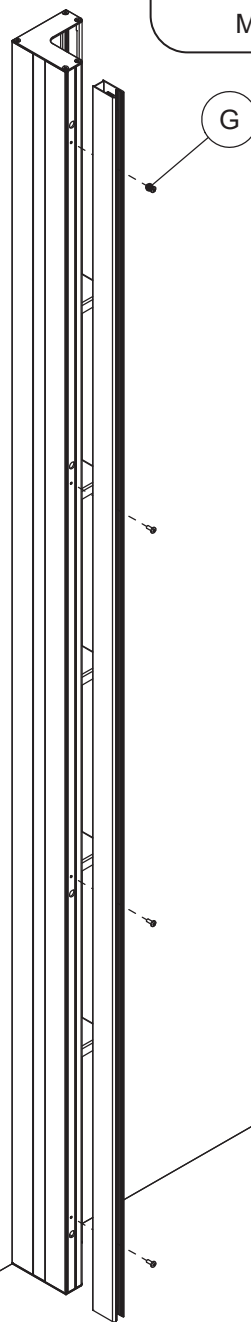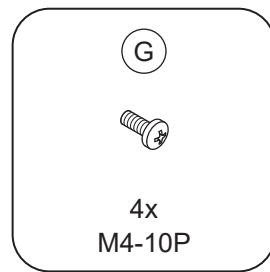

1207

DANSANI
DANISH BATHROOM DESIGN

M1207-01

A+A B+B C+C
A+B B+C A+C
B+A C+B C+A

1209

M1209-03

A+D+4 B+D+4
A+D+2/3 B+D+2/3
D+A+4 D+B+4
D+A+2/3 D+B+2/3

